



# Microsoft Band 2 Screen Replacement

Replacing a broken or damaged screen on the Microsoft Band 2.

Written By: Chris Syracuse



## INTRODUCTION


This guide will cover how to remove the screen of the Microsoft Band 2 smartwatch. If the display is blank or dim it may be advantageous to consider replacing the screen on the Band 2.

---




### TOOLS:


- [Heat Gun](#) (1)
  - [Spudger](#) (1)
  - [iFixit Opening Picks set of 6](#) (1)
  - [Tweezers](#) (1)
-

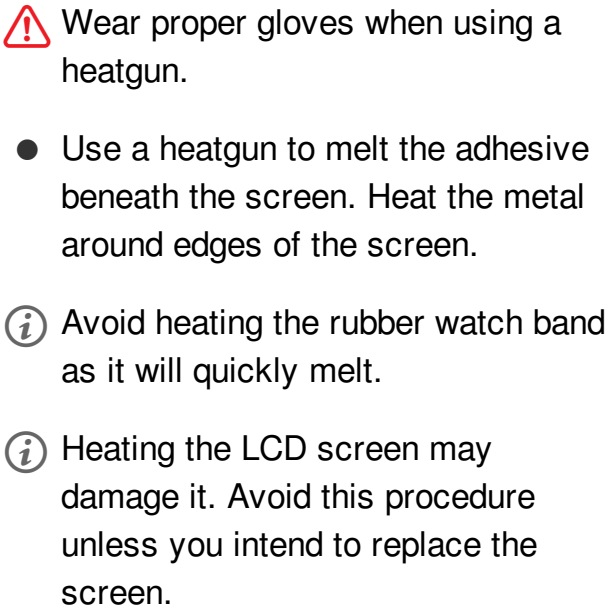

## Step 2

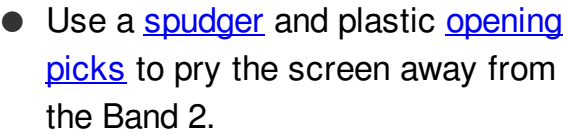

## Step 3

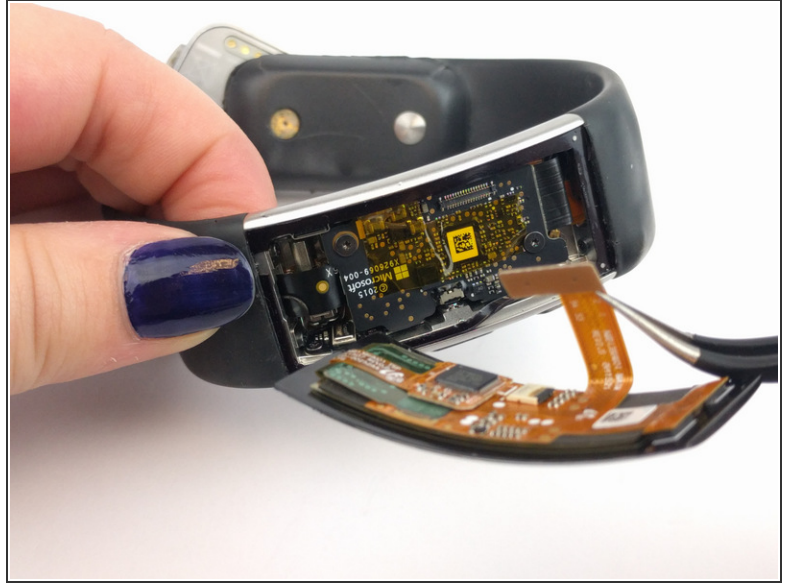

- Use metal tweezers to gently detach the orange press-fit (or "pop") connector.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 04:08:15 PM.